

Chimineea

Big Green Egg

The Ultimate Cooking Experience



SAFETY FIRST!

Please take a moment to read this Usage and Safety Instruction sheet so that you can operate and care for your Big Green Egg Chimineea SAFELY. If you have any questions, please email us at customer-support@biggreenegg.com or call customer service at 800-793-2292 Monday through Friday 9:00 am to 5:00 pm EST. For the most efficient burning, keep the fire in the center of the BIG GREEN EGG chimineea and away from the sides of the chimineea. Over firing may cause damage.

CHIMINEEA USAGE INSTRUCTIONS:

- Place the provided lava rocks at the bottom of your Big Green Egg chimineea, ensuring an even coverage of the base surface.
- Arrange a few pieces of wood kindling in a tented formation on top of the lava rocks. Place one Speedilight at the center of the tented wood.
- Ignite the Speedilight using a Big Green Egg long stick match.
- As the fire starts, add more wood to maintain a medium-sized fire. Always wear Big Green Egg EGGmitt or fire-resistant gloves when handling wood while the chimineea is burning.
- Keep the cap and door on the chimineea at all times while the fire is burning.
- Add wood as needed, using smaller split pieces for better quality fires. Avoid using larger pieces that may not burn through and could stall the fire.

BURNING INSTRUCTIONS:

 
- Do not use the chimineea for cooking.
- Only build small to medium-sized fires in your chimineea. It is not designed to function as a primary heat source or furnace.

- Avoid building fires with flames extending above the top of the chimineea; overfiring can lead to failure and void the warranty.
- Keep fires centered to prevent direct contact between burning wood and the chimineea walls. Remove ashes when necessary; they should not reach the fire grate.
- Follow the provided steps for lighting a fire in your chimineea, using seasoned hardwood for optimal performance.
- Wood should be no more than 14 inches (35cm) in length.
- The chimineea is intended for the burning of firewood or small manufactured logs. Seasoned hardwood such as oak creates the cleanest burning, most efficient fire in the chimineea.
- Do not burn treated lumber, pellets, wood containing metal, garbage, non-wood products, or building materials.
- If using pinion wood to repel insects, mix it with other wood for longer burning.
- Use only 2 or 3 logs for a medium-sized fire; do not overload the chimineea.


LIMITATION OF LIABILITY:

The Big Green Egg is not liable for claims in excess of the retail sale value of the chimineea. BGE's sole liability for any claims including without limitation, claims based in contract, tort, at law or equity, for any damages arising out of, or resulting from, the use of the chimineea or its related products, shall be limited to the actual amount of the damages or the purchase price of the chimineea or its related products, whichever is less. To be clear, BGE will never be liable for more than actual purchase price of the chimineea or its related products.

Please use caution and follow the safety guidelines below to prevent damage or injury. Operating the chimineea under proper conditions ensures a safe and enjoyable experience. Failure to operate the chimineea safely could result in property damage, personal injury including death. Always comply with local laws, statutes or ordinances restricting the use of on outdoor open flames and consult with your fire department to determine if there are fire or flame restrictions in your area.

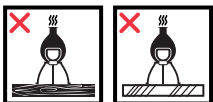

Do not use the chimineea on wood decks, and always use fire-resistant mats when placed on metal surfaces.

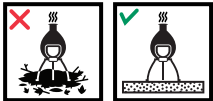

Protect the area underneath with non-combustible material to catch sparks or embers, such as concrete or stone.



Never leave the chimineea unattended while a fire is burning.



Keep children, pets, and activities away from the chimineea during use.



Avoid using alcohol or non-prescription drugs impairing your ability to operate the chimineea.



All surfaces are hot when the fire is burning; avoid touching for at least one hour after extinguishing.



Avoid bumping, touching or impacting the chimineea.



Always keep the metal screen and top flue in place on the chimineea during use.



Use a Big Green Egg EGGmitt, fire-resistant gloves, and long, sturdy fireplace tools when adding wood.



Place the chimineea in a clear open area, away from flammable objects or structures. Keep the chimineea at least 8 feet away from combustible materials.



Do not use the chimineea indoors, only use it outdoors in an area with adequate air circulation. Do not store the chimineea indoors until it is completely cool.



Keep hands and face away from the fire; be cautious of loose hair and clothing.



Do not use flammable liquids in the chimineea, such as kerosene or lighter fluid.



Regularly clean out ashes that exceed the top of the lava rocks for more efficient burns.